

CONAIRMAN™



THE PRECISION TRIO

TOOL TIPS

for the multi-purpose grooming system for
shaving, trimming & detailing.

CMK30A (CM506A-TRIMMER)

HERE YOU ARE.

RIGHT WHERE YOU NEED TO BE, MAN.

FROM THE STREETS OF
BROOKLYN, NEW YORK

**WE ARE CHANGE
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO
YOUR HANDS TO HELP YOU CRAFT
**A REPUTATION, NOT JUST ENGAGE
IN SOME BRILLIANT GROOMING.**

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS
& KNOW HOW TO LET YOU CRAFT A REPUTATION

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, remove the batteries after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Do not use or leave the trimmer in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces.
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains batteries that are non-replaceable.

THE PRECISION TRIO

BUCKLE UP, IT'S TRIMMING TIME.

The beard & stubble trimmer from The Man Kit is designed for trimming your beard, stubble, moustache & goatee.



1. Diamond sharpened blades
2. 3 position taper control
3. 3x stubble comb guides -3mm, 6mm and 9mm for trimming stubble & moustache
4. On/off power switch
5. Power Adaptor

PREPPING YOUR NEW TOOL

CHARGING

The Precision Trio Trimmer is so easy to use. But before you start using your new tool, you must take the time to charge it overnight for 1.5 hours before its first use. Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously 1.5 hours.
- Maximum battery capacity will only be reached after 3 charging & discharging cycles.
- Ensure your new tool is switched off.
- Insert the small plug on the charging adaptor into the socket on the bottom of your new tool.
- Plug the charging adaptor into a suitable mains power socket & switch on. If the battery is very weak, wait about 1 minute.
- The red charging LED indicator light on the trimmer will stay on when correctly connected. When the battery is getting low and the unit needs to be plugged in to charge the LED light will flash red.
- A full charge of 1.5 hours will supply up to 60 minutes cordless runtime.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to fully discharge & then recharge your tool for 1.5 hours every 3 months.

BEFORE USING

- Always inspect the trimmer for noticeable signs of damage.
- Always inspect the trimmer before use to ensure the blades are free from hair, debris etc.
- Ensure the batteries are correctly inserted before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.

USING THE STUBBLE COMB GUIDES

This trimmer includes 3 comb guides for trimming stubble and moustache. These combs allow you to trim to 3 different cutting lengths - 3mm, 6mm or 9mm.

REMOVING A COMB GUIDE

To remove a comb guide, ensure the appliance is switched off.

With your thumb, slide the comb guide up until it is fully released from the head of the trimming blade. If you want to completely remove hair, use the trimming blade without the comb guide.

3 POSITION TAPER CONTROL

The taper control provides 3 precision settings for blending layers & a precise, close cut, everytime - 0.5mm, 1mm & 1.5mm.

To increase the cutting length, slide the switch down.

To reduce the cutting length, slide the switch up.

CAUTION: WHEN REMOVING A COMB GUIDE ATTACHMENT, BE CAREFUL NOT TO CUT YOUR FINGERS AS THE BLADES ARE SHARP.

TRIMMING TIPS

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

TRIMMING YOUR NECKLINE

- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Attach one of the comb guides for the desired cutting length.
- Move the trimmer upward and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.
- Never switch the appliance off whilst in the hair.



TRIMMING YOUR SIDEBURNS

- Attach the one of the stubble comb guides for the desired cutting length.
- Always trim your sideburns from the top down.



TRIMMING & OUTLINING STUBBLE/ BEARD

- Attach one of the stubble comb guides for the desired cutting length.
- After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
- Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and towards your hairline.

TRIMMING YOUR MOUSTACHE

- For best results, start with a clean, slightly damp moustache.
- Use a comb to comb hairs in the direction of growth.
- Attach one of the stubble comb guides for the desired cutting length. It is a good idea to start with the longest trimming length (you can always go back and cut your moustache closely with a shorter setting).
- Always trim your moustache from the top down.
- After your moustache has been trimmed to the desired length, remove the comb guide and using the blades only, define the outline of the bottom of your moustache.



TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades after every use.

The blades are washable for easy cleaning.

To remove the trimming blade, place both of your thumbs at the top of the trimmer and push the blade head away from you until it comes away from the trimmer power handle.





Take a small brush and brush away any loose hairs that have collected in the blades.

To clean the handle of your trimmer, simply wipe with a cloth that has been dampened in water and mild detergent.

NEVER IMMERSE THE HANDLE OF THE TRIMMER IN WATER.

WORLDWIDE VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

USB Wall adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 230V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	230V
	European plug: 230V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	230V
	Australian and New Zealand plug: 230-240V	Australia, New Zealand	230-240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

BATTERY DISPOSAL

This trimmer contains a Li-ion battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.

Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

PLEASE TAKE THE APPLIANCE TO A RECYCLING CENTRE, WHERE THE INTERNAL RECHARGEABLE BATTERY SHOULD BE REMOVED BY A PROFESSIONAL AND RECYCLED SEPARATELY.

WARRANTIES

1. In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 2 YEAR (24 MONTH) WARRANTY

2. **AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.
3. Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
4. This Standard 2 Year (24 Month) Warranty ("Standard Warranty") applies for a period of 2 years (24 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
5. If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or contact us directly if you are unable to take the product back to the place of purchase. The

procedure for claiming under this Standard Warranty is as detailed below.

6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. **In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:**
 1. **Date of purchase**
 2. **Retailer name & location**
 3. **Product model number & name**
 4. **Confirm you have your purchase receipt**
 5. **Detail the problem with your product.**
8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person

not authorised to do so by Conair or where non-approved replacement parts are used.

15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.
18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during the Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.

23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

SPARE PARTS

25. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills NSW 2084

Customer Service

Australia

1800 650 263

email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159 Pakuranga, Auckland New Zealand 2140

Customer Service

New Zealand

0800 266 247

email: aus_info@conair.com



©2024 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new ConairMan product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Check out [CONAIRMAN.COM.AU](https://www.conairman.com.au) for grooming tips & know how to let you craft a reputation.

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

CONAIRMAN



THEPRECISIONTRIO

TOOL TIPS

for the USB rechargeable rotary shaver with
3D floating heads for the closest shave.

CMK30A (CM667A-ROTARY SHAVER)

HERE YOU ARE.

RIGHT WHERE YOU NEED TO BE, MAN.

FROM THE STREETS OF
BROOKLYN, NEW YORK

**WE ARE CHANGE
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO
YOUR HANDS TO HELP YOU CRAFT

**A REPUTATION, NOT JUST ENGAGE
IN SOME BRILLIANT GROOMING.**

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS
& KNOW HOW TO LET YOU CRAFT A REPUTATION

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Do not use or leave the USB charging cable in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Detach the hand-held part from the USB charging cable before cleaning in water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance contains batteries that are non-replaceable.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Keep air openings free of lint, hair and similar debris.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the USB charging cable away from heated surfaces.
- Never twist or pull on the USB charging cable.
- Do not use an extension USB charging cable with this appliance.
- After use do not wrap the cable around the appliance as in time this may cause the cord to fracture. Coil cable loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the USB charging cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- When using with the USB charging adaptor, for additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom - ask your installer for advice.
- The appliance is only to be used with the USB charging cord provided with the appliance.

THE PRECISION TRIO SHAVER

BUCKLE UP, IT'S SHAVING TIME.

The Precision Precision Trio Shaver is the rechargeable rotary shaver with 3D floating heads for the closest shave.



1. USB Charging Port
2. 3 flexing rotary shaver heads & blades
3. Shaving head release button
4. On/Off switch with Travel Lock feature
5. LED Operation and charging indicator light
6. LED Travel Lock indicator light
7. Protective cover
8. USB charging cable

PREPPING YOUR NEW TOOL

CHARGING

The Precision Trio Shaver is so easy to use. But before you start using your new tool, you must take the time to charge it for a **MINIMUM OF 3 HOURS BEFORE ITS FIRST USE**. Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 3 hours.
- Ensure your new tool is switched off.
- To charge the shaver, first make sure it is switched off. Insert the type C USB plug into the bottom of the shaver, then insert the USB cable into a USB wall adaptor with output 5.0V DC, 1000mA. Plug the adaptor into any wall outlet at the voltage listed on the label affixed to the adaptor. Unplug adaptor when not in use.
- The USB cable can alternatively be plugged directly into a direct USB port for charging.
- Once charging is started, the white LED charge/operation light will flash. Once the shaver is completely charged, the white LED light will illuminate continually.
- When charging, the unit will not operate.
- It takes 3 hours for the shaver to be fully charged.
- A full charge will supply 60 minutes cordless runtime.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to allow your shaver to fully discharge & then recharge for 3 hours every 6 months.
- **WARNING:** If the charging light suddenly starts to flash rapidly, the appliance is faulty. If this happens, stop charging, remove the adaptor from the outlet and contact our Customer Care Center for further advice (see the Warranty section of this information booklet).

CORDLESS OPERATION

- Charge the shaver. First, make sure it is switched off. Insert the type C USB plug into the bottom of the shaver, then the USB cable into a USB wall adaptor with output 5.0V DC, 1000mA. Plug the adaptor into any wall outlet at the voltage listed on the label affixed to the adaptor. The LED light will appear when the USB cable is correctly inserted into the appliance, the USB wall adaptor and the USB wall adaptor is connected to an outlet.
- Once the appliance is fully charged, the charging light will stop flashing, but remain on. Unplug the adaptor from the outlet, then the USB cable from the appliance and prepare for use.

NOTE: As an extra safety feature, this shaver is designed to not operate while charging.

WET/DRY FEATURE

This device is showerproof only when unplugged from a wall outlet and USB charging cable.

Once it is unplugged, it can be safely used in the shower and cleaned using running water from a faucet. The shaver is not meant to be submerged in water.

Always allow the shaver to dry thoroughly after each use and before storing.

HOW TO USE THE PRECISION TRIO SHAVER

BEFORE USING

- Always inspect the rotary heads & blades for noticeable signs of damage.
- Always inspect the rotary heads & blades before use to ensure they are free from hair, debris etc.
- If the foil is cracked, broken or loose, do not use it again & replace with a new foil. Using a foil in a faulty condition can cause injury.
- Ensure the shaver is sufficiently charged before use.
- Men whose skin is sensitive or easily irritated by shaving, or who suffer from a skin allergy, should test one section on the leg or arm before using the shaver.
- Do not shave on open wounds, cuts, burns, warts, moles or on sunburned skin.
- Do not use the foil shaver if you suffer from skin irritations or infections, such as psoriasis or eczema. If at all unsure always consult your doctor before use.

TRIMMING & SHAVING TIPS

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

USING THE PRECISION TRIO SHAVER

PREPARING THE SKIN

Before using the Precision Trio Shaver, make sure that the skin is clean & free from oil & dirt.

Exfoliating the skin with a face scrub once a week helps to:

- Prevent hairs from growing under the skin, resulting in in-grown hairs
- Remove dead skin cells & refine the texture of your skin, resulting in a closer shave
- Prepare your skin to help it absorb skin care products.

We recommend exfoliating ideally the day before, as well as just before shaving. This will help straighten the hair & make it easier to shave. Avoid exfoliating just after shaving.

Having a warm shower before use will also help to soften the hair.

1. Remove the protective cover.
2. Switch the shaver on by pressing down on the on/off button (hold for 3 seconds if the travel lock has been engaged).
3. It is strongly recommended to start shaving from the neck area, which is more sensitive
4. Hold the shaver heads parallel to the skin & use short overlapping circular motions both clock wise & anti-clockwise.

5. Do not push the shaver on the skin too hard as it could cause irritation, make the shaver warm & prevent a perfect shave, exert light pressure & let the shaver heads do all the work.
6. As a precaution, the operation of the shaver may slow down substantially if the foils & blades are pressed too hard against the skin.
7. Please note that it can take up to 2 to 4 weeks for your skin to adapt to a new shaver. We recommend using a facial moisturiser after shaving & not an aftershave solution that contains alcohol.

NOTE: The Precision Trio Shaver will stop working if the unit is filled with hair or debris to protect from damage. Ensure you clean the shaver regularly to maintain full functionality



TRAVEL LOCK

1. To prevent the shaver from switching on unintentionally, you can press & hold down the ON/OFF button for 3 seconds until the white led light above the lock icon flashes 3 times. If you try and turn on the tool while travel lock is engaged the white LED indicator light will flash 3 times.
2. To turn the shaver back on while travel lock has been engaged simply hold the ON/OFF button for 3 seconds or until the unit starts. The shaver is now unlocked & will work as normal when switched on.

SHAVER CLEANING & MAINTENANCE

Because the shaver rotary heads & blades are precision made & very sharp, always handle with care.

To ensure the long-lasting performance of your shaver & to keep it clean & odour free, check & clean after every use, following the below instructions:

After each use

1. Turn the shaver OFF. Press the shaving head release button (Fig. 2), the head will spring open.
2. Using the supplied brush clean any excess hair from the hair chamber & around the blades into a bin

To remove the foils & blades for deep cleaning or replacement.






We recommend replacing the blade head assembly after approximately 2 years of regular daily use. Replacement blade assemblies are available from Conair Customer Service at aus_info@conair.com.

1. Press the shaving head release button, the head will spring open.
2. Remove the shaving head by pulling it upwards firmly.
3. With the shaver head on a flat surface, foils facing down. Turn the locking wheel in the centre counterclockwise: pulling it up to unlock & remove the retaining frame that holds the blades & foils in place.
4. Remove & clean only one set of blades/foil at a time, then replace.
5. Once foils & blades are reinstalled into the shaving head, secure in place with the locking wheel (turn clockwise). Insert the shaver head firmly into the shaver body until it clicks into place and close head.

ATTENTION: Do not clean more than one blade at a time, since they are all matching sets. If you accidentally interchange them, it could influence the shaving results.

WORLDWIDE VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable USB wall adaptor will be required, please refer to the chart below.

USB Wall adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 230-240V	Australia, New Zealand	230-240V
 	American plugs: 120V	North America, Japan, Canada (parts of)	120V

BATTERY DISPOSAL

This Precision Trio Shaver contains a non replaceable Li-ion battery. To protect the environment when the battery is at it's end of life, the appliance must be disposed of safely at the end of its useful life.



Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

WARRANTIES

1. In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 2 YEAR (24 MONTH) WARRANTY

2. **AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.
3. Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
4. This Standard 2 Year (24 Month) Warranty ("Standard Warranty") applies for a period of 2 years (24 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
5. If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or contact us directly if you are unable to take the product back to the place of purchase. The

procedure for claiming under this Standard Warranty is as detailed below.

6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. **In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:**
 1. **Date of purchase**
 2. **Retailer name & location**
 3. **Product model number & name**
 4. **Confirm you have your purchase receipt**
 5. **Detail the problem with your product.**
8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person not authorised to do so by Conair or where non-approved replacement parts are used.

15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.
18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during this Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.
23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

SPARE PARTS

25. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills NSW 2084

Customer Service

Australia

1800 650 263

email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159 Pakuranga, Auckland New Zealand 2140

Customer Service

New Zealand

0800 266 247

email: aus_info@conair.com



©2024 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new ConairMan product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Check out [CONAIRMAN.COM.AU](https://www.conairman.com.au) for grooming tips & know how to let you craft a reputation.

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

CONAIRMAN™



THE PRECISION TRIO

TOOL TIPS

for the ultra-compact nose & ear trimmer
with stainless steel blades for precision results.

CMK30A (CM522A - NOSE TRIMMER)

HERE YOU ARE.

RIGHT WHERE YOU NEED TO BE, MAN.

FROM THE STREETS OF
BROOKLYN, NEW YORK

**WE ARE CHANGE
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO
YOUR HANDS TO HELP YOU CRAFT

**A REPUTATION, NOT JUST ENGAGE
IN SOME BRILLIANT GROOMING.**

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS
& KNOW HOW TO LET YOU CRAFT A REPUTATION

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, remove the batteries after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Do not use or leave the trimmer in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not place on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.

THE PRECISION TRIO NOSE TRIMMER

BUCKLE UP, IT'S TRIMMING TIME.

The Precision Trio is the ultra-compact nose & ear trimmer with stainless steel blades for precision results.



1. Cover
2. Detachable nose trimmer head.
3. Durable, compact design with a slim shape
4. Switch button

5. Battery replacement cover.

PREPPING YOUR NEW TOOL

INSERTING THE BATTERY

- To insert the AAA battery, first ensure that the trimmer is switched off, then remove the battery compartment cover on the base by rotating the bottom of the trimmer to the left & the pull downwards.
- Insert the AAA battery, positive terminal first.
- Replace the bottom of the trimmer & twist to the right to secure into place.
- Switch the trimmer on by pushing the switch button up.
- If the finishing trimmer remains unused for a while or if the battery has run down, remove from the trimmer. This will increase the life of the trimmer.
- Always purchase the correct size & grade of battery most suitable for intended use.
- Clean the battery contacts & also those of the appliance prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Exhausted batteries are to be removed from the appliance & safely disposed of.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks avoid touching & dispose of at a recycling centre.
- Non-rechargeable batteries are not to be recharged.
- Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.

BEFORE USING

- Always inspect the trimming head for noticeable signs of damage.
- Always inspect the trimming head before use to ensure the blades are free from hair, debris etc.
- Ensure the battery is correctly inserted before use.

REMOVING THE ATTACHMENT HEAD

- Before removing the trimming blade, always ensure the trimmer is switched off.
- To remove the trimming blade, turn it to the right so that the "o" mark on the attachment head aligns with the "l" mark on the body, then pull upwards.
- To re-attach the trimming blade, align the "l" mark on the body with the "o" mark on the attachment head, then turn to the left until the "•" mark aligns with the "l" mark on the body.

TRIMMING TIPS

CHECK OUT **CONAIRMAN.COM.AU** FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

1. Switch the trimmer on by sliding the On/Off switch on the handle up towards the "I".
2. Gently insert the trimming head into the nose or ear & move the trimmer in a circular motion & slightly back & forth.
3. Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs.
4. Never insert the trimmer more than 6mm into your nose or ears.
5. Gently insert trimmer head into nostril. Gently move trimmer in and out of the nostril to remove unwanted hair.
6. Never turn the trimmer off whilst in the nose & ears.

TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades after every use.

The blades are washable for easy cleaning. To remove the trimming blades for cleaning follow the instructions at REMOVING THE ATTACHMENT HEAD.

1. Ensure the trimmer is turned off.
2. After remove the trimming blade, take a small brush & brush away any loose hairs that have collected in the blades.
3. Rinse the trimming blades under running water (Fig.5 & Fig.6).
4. For proper functioning of the trimmer, the handle cannot touch or be immersed in water.
5. After cleaning, make sure to shake off excess water & dry the blades of the trimmer before replacing onto the handle.
6. To re-attach the trimming blade, follow the instructions at **REMOVING THE ATTACHMENT HEAD**.
7. To clean the handle of your trimmer, simple wipe with a cloth that has been dampened in water & mild detergent.

Fig.5


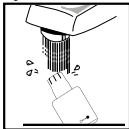


Fig.6

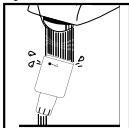

NOTE: DO NOT ATTEMPT TO REPAIR OR REPLACE THE BLADES. IN THE EVENT THAT THE BLADES BECOME BLUNT OR DAMAGED, CONTACT THE CONAIR CUSTOMER CARE LINE (CONAIR CUSTOMER SERVICE).

WARRANTIES

- In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 2 YEAR (24 MONTH) WARRANTY

- AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.
- Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
- This Standard 2 Year (24 Month) Warranty ("Standard Warranty") applies for a period of 2 years (24 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
- If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or

contact us directly if you are unable to take the product back to the place of purchase. The procedure for claiming under this Standard Warranty is as detailed below.

6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. **In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:**
 1. **Date of purchase**
 2. **Retailer name & location**
 3. **Product model number & name**
 4. **Confirm you have your purchase receipt**
 5. **Detail the problem with your product.**
8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send to the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person

not authorised to do so by Conair or where non-approved replacement parts are used.

15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.
18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during this Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.
23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

SPARE PARTS

25. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills NSW 2084

Customer Service

Australia

1800 650 263

email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159 Pakuranga, Auckland New Zealand 2140

Customer Service

New Zealand

0800 266 247

email: aus_info@conair.com



©2024 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new ConairMan product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Check out [CONAIRMAN.COM.AU](https://www.conairman.com.au) for grooming tips & know how to let you craft a reputation.

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**