

**CONAIRMAN**



**THE MULTIGROOMER**

# TOOL TIPS

for the 10-in-1 multi purpose kit  
for all-over grooming of your face, body & head.

VSM7052A

# HERE YOU ARE.

**RIGHT WHERE YOU NEED TO BE, MAN.**

---

FROM THE STREETS OF  
BROOKLYN, NEW YORK

**WE ARE CHANGE  
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO  
YOUR HANDS TO HELP YOU CRAFT

**A REPUTATION, NOT JUST ENGAGE  
IN SOME BRILLIANT GROOMING.**

---

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER  
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH  
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

---

CHECK OUT [CONAIRMAN.COM.AU](http://CONAIRMAN.COM.AU) FOR GROOMING TIPS  
& KNOW HOW TO LET YOU CRAFT A REPUTATION

---

**CONAIRMAN™**

**CRAFT A  
REPUTATION,  
MY MAN**

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



**WARNING:** Do not use or leave the AC power adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains rechargeable batteries that are non- replaceable.

# THE MULTI GROOMER

STEP UP, IT'S GROOMING TIME.

The Multi Groomer is the 10-in-1 multi purpose kit for all-over grooming of your face, body & head.



- |  |  |                              |
|--|--|------------------------------|
| 1. Diamond sharpened blades            | 8. 7mm precision blade   | 12. Beard & moustache comb   |
| 2. Washable blades                     | 9. Rotary blade  | 13. Charging & storage stand |
| 3. 30min cordless use with LED display | 10. 5 position comb guide (3mm to 15mm) for keeping your beard in top shape                        | 14. Cleaning brush           |
| 4. Attachment release button           | 11. 4 comb guides (3mm, 5mm, 7mm & 10mm) for trimming, shaping, blending & fading head & body hair | 15. Oil                      |
| 5. 30mm trimming blade                 |  |                              |
| 6. 40mm body trimming blade            |  |                              |
| 7. Foil shaver                         |  |                              |

# PREPPING YOUR NEW TOOL

## CHARGING

The Multi Groomer is so easy to use. But before you start using your new tool, you must take the time to charge it overnight for **16 hours** before its first use. Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 16 hours.
- Maximum battery capacity will only be reached after 3 charging & discharging cycles.

The Multi Groomer can be charged whilst standing in the charging/storage stand or without the stand.

To charge the trimmer whilst in the stand, remove the trimmer & accessories from the stand. Insert the small plug on the charging adaptor into the hole on the base of the stand & push firmly into position. Route the cord through the channel on the base of the stand & secure in place. Plug the charging adaptor into a suitable mains power socket & switch on. Ensuring your new tool is switched off, assemble the trimmer into the stand & push the trimmer down onto the small plug to commence charging.

To charge the trimmer without the stand, simply insert the small plug on the charging adaptor into the hole on the base of the trimmer.

- The red charging LED indicator light on your new tool will remain on when correctly connected to the mains power.
- A full charge of 16 hours will supply 30 minutes cordless runtime.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to fully discharge & then recharge your tool for 16 hours every 3 months.

# HOW TO USE THE MULTI GROOMER

## BEFORE USING

- Always inspect the trimmer blades for noticeable signs of damage.
- Always inspect the trimmer blades before use to ensure they are free from hair, debris etc.
- Ensure the trimmer is sufficiently charged before use.
- If the foil is cracked, broken or loose, do not use it again & replace with a new foil. Using a foil in a faulty condition can cause injury.
- Do not shave on open wounds, cuts, burns, warts, moles or on sunburned skin.
- Do not use the foil shaver if you suffer from skin irritations or infections, such as psoriasis or eczema. If at all unsure always consult your doctor before use.

## CHANGING THE ATTACHMENT HEADS

1. Before changing the attachment heads, make sure your trimmer is switched off.
2. Remove any comb guides attached to your trimmer.
3. To remove an attachment head, hold the handle of the trimmer with one hand, while holding the attachment head with the other hand, then press the attachment release button & pull the attachment head back & away from the front of the handle.
4. To attach an attachment head, place the attachment head over the top of the handle, ensuring that the plastic lug is positioned at the back. Slide the attachment head down until it clicks into place.

# TRIMMING TIPS

CHECK OUT [CONAIRMAN.COM.AU](http://CONAIRMAN.COM.AU) FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

## USING THE 30MM TRIMMING BLADE

The 30mm trimming blade has been designed for stubble, beard & moustache trimming + shaping.

The 5 position comb guide (3mm to 15mm) is designed for use with the 30mm trimming blade. This comb guide is ideal for keeping your beard & stubble in top shape.

The 30mm trimming blade can also be used without any comb guide attached to outline, & for an even closer finish.

### Using the 30mm trimming blade to outline

The 30mm trimming blade without a comb guide attached will cut roughly to a length of 0.5 mm.

1. Do not attach a comb guide.
2. Hold the trimmer upside down with the blade facing downwards, yet flat against the skin.
3. Move the trimmer gently downwards in small strokes around the edge of the area you wish to outline.
4. Having defined the outline, hold the trimmer with the blades pointing upwards, yet flat against the skin & move the trimmer upwards against the direction of hair growth. This will trim the unwanted hair adjacent to the outline.

### Using the 30mm trimming blade with the 5 position comb guide

1. To attach the 5 position comb guide, slide the comb guide onto the front of the 30mm trimming blade & push down at the rear to lock into place – you will hear a clicking noise when it's in position.
2. The comb guide has 5 length settings, 3 mm, 6 mm, 9 mm, 12 mm & 15 mm. To adjust the cutting length, push the button & click the comb guide forward to the required position.
3. Select the required cutting length setting (3-15 mm). If you require more than one cutting length, start with the longest length first.
4. Switch the trimmer on.
5. Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
6. Move the trimmer upwards & outward through the hair, against the direction of hair growth.
7. The trimmer will work most efficiently when cutting through hair at its own speed.
8. For increased trimming performance, press & hold the turbo button, this is often necessary for thicker areas of hair.
9. Never switch the appliance off whilst in the hair.
10. To remove the 5 position comb guide, gently lift the rear of the guide upward & away from the 30mm trimming blade head.

---

**BE CAREFUL NOT TO APPLY EXCESS PRESSURE TO THE BLADE, AS THIS MAY DAMAGE THE BLADE AND CAN RESULT IN INJURY TO THE SKIN DURING TRIMMING.**

---

## USING THE 40MM BODY TRIMMING BLADE

The 40mm body trimming blade is a specially designed wider blade for easy trimming of head & body hair.

### Using the 40mm trimming blade to outline

The 40mm trimming blade without a comb guide attached will cut roughly to a length of 0.5 mm.

1. Hold the trimmer with the blades pointing upwards, yet flat against the skin
2. Move the trimmer upwards & outwards through the hair, against the direction of hair growth.
3. Make sure to be particularly careful when trimming sensitive areas.
4. The trimmer will work most efficiently when cutting through hair at its own speed.

Using the 40mm trimming blade with one of the 4 additional comb guides for trimming head & body hair

1. These comb guides come in 4 different length settings: I = 3 mm, II = 5 mm, III = 7mm & IV = 10mm.
2. If you require more than one cutting length, start with the longest length first (10mm).
3. To attach one of these comb guides, slide the comb guide onto the front of the 40mm trimming blade & push down at the rear to lock into place – you will hear a clicking noise when it's in position.
4. Switch the trimmer on.
5. Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
6. Move the trimmer upwards & outward through the hair you wish to blend.
7. To blend-in a shorter length use a smaller jaw line comb & use in the same way as above.
8. The trimmer will work most efficiently when cutting through hair at its own speed.
9. For increased trimming performance, press & hold the turbo button, this is often necessary for thicker areas of hair.
10. Never switch the trimmer off whilst in the hair.
11. To remove the comb guide, gently lift the rear of the guide upward & away from the 40mm trimming blade head.

## **CREATING AN ALL-OVER EVEN CUT ON YOUR HEAD**

1. Ensure the trimmer is switched off.
2. Select the desired trimming length setting as required.
3. Switch the trimmer on – the blades will start to move.
4. Start cutting at the nape of the neck, holding the trimmer with the teeth of the trimmer pointing upwards, ensuring that the comb guide is resting flat against the head.
5. Slowly move the trimmer upwards & outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair & the blades will cut the hair to the length as shown on the comb guide.
6. Once the desired length is achieved at the back of the hair, start trimmer the top & sides.
7. Hold the trimmer to the front of your hair with the teeth pointing towards the back of your head & move the trimmer towards your crown. Repeat as necessary, moving in rows from the front & the sides of your head to the back.
8. The trimmer will work most efficiently when cutting through hair at its own speed.
9. Never switch the appliance off whilst in the hair.
10. To remove the comb guide, simply press in the middle section of the comb guide & push all the way to the top until you can remove it from the trimmer.

## USING THE FOIL SHAVER

### PREPARING THE SKIN

Before using the foil shaver, make sure that the skin is perfectly clean & free from grease or cream. Exfoliating the skin once or twice a week before shaving helps to maintain healthy & fresh skin, but it also helps to:

- Prevent hairs from growing under the skin, resulting in in-grown hairs
- Remove dead skin cells & refine the texture of your skin, resulting in a closer shave
- Prepare your skin to help it absorb skin care products.

We recommend exfoliating ideally the day before, as well as just before shaving. This will help straighten the hair & make it easier to shave. Avoid exfoliating just after shaving.

Having a warm shower before use will also help to soften the hair.

1. Attach the foil shaving head.
2. Switch the trimmer on.
3. Always keep the shaver perpendicular to the surface to be shaved.
4. Always work with both hands: stretch the skin with one hand & move the trimmer with the other hand.
5. Slowly move the shaver, exerting light pressure. As a precaution, the operation of the trimmer may slow down substantially if the foil shaving head is pressed too hard against the skin.

## USING THE 7MM PRECISION BLADE

The 7mm precision blade is for the finishing touches on your stubble, beard, sideburns & eyebrows.

1. Attach the precision trimming blade.
2. Switch the trimmer on.
3. Gently move the blade through the area of hair you wish to trim.
4. To make it easier to define those finishing touches, flip the trimmer over so that you can make it even easier working with the blade close to the skin.
5. The trimmer will work most efficiently when cutting through hair at its own speed.
6. For increased trimming performance, press & hold the turbo button, this is often necessary for thicker areas of hair.
7. Never switch the appliance off whilst in the hair.

## USING THE ROTARY BLADE

The rotary blade has been designed for trimming those hard to reach places like nose & ear hair. No nicks, cuts or pulling.

1. Attach the rotary trimming blade.
2. Switch the trimmer on.
3. Insert the trimmer into the nose or ear & gently move the trimmer in a circular motion.
4. Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs.
5. Never insert the trimmer more than 5-6mm into your nose or ears.
6. Never turn the trimmer off whilst in the nose & ears.

# TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades + the comb guides after every use.

The blades are washable for easy cleaning.

To remove the trimming blade, follow the instructions at CHANGING THE ATTACHMENT HEADS.

1. First, take a small brush & brush away any loose hairs that have collected in the blades.
2. Rinse the trimming blades under running water. The comb guides can also be rinsed separately.
3. After cleaning, make sure to shake off excess water & dry the head of the trimming blades + comb guide before replacing onto the handle.
4. Do not disassemble the blades.

## OILING THE BLADES

Periodically, it may be necessary to oil the blades. After cleaning, attach a trimmer head, switch on & oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed trimmers & does not evaporate or slow the blades.

## KEEPING YOUR FOIL SHAVER IN TIP TOP SHAPE

To remove the foil shaver head, follow the instructions at CHANGING THE ATTACHMENT HEADS.

1. To make cleaning easier, the foil of the shaving head is removable.
2. To remove it, press the fasteners on its sides using your thumb & your index finger & lift it up.

### BE CAREFUL NOT TO PUSH ON THE FOILS, THEY ARE DELICATE AND CAN EASILY BE DAMAGED.





3. Rinse the shaver cutter & foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
4. After wet cleaning, allow the foil frame & cutters to air-dry before closing the foil frame & shaver head. The cutter can also be cleaned with a cleaning brush.
5. Replace shaver head back onto the handle until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.

**NEVER use thinners, other solvents or any harsh cleaners.**

6. Once the foil shaver is dried, carefully place the protective cap on.

# WORLDWIDE VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 230-240V	Australia, New Zealand	230-240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

# BATTERY DISPOSAL

The Multi Groomer contains a Nickel Metal-Hydride battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.



Ni-MH

Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional & recycled separately.

For more information about the recycling of electrical & battery operated appliances, please contact your local council office or your household waste disposal service.

# LIMITED TWO YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please retain this section of the instruction booklet with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

**The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. Attach a copy of your purchase receipt and store in a safe place.**

To make a warranty claim, call or email Conair Customer Service or you can return the defective product back to the place it was purchased where it will be replaced (see Point 12 in Conditions). Please provide the following details:

1. Date of purchase
  2. Retailer Name & Location:
  3. Product Name/Model Number:
  4. Confirm you have your purchase receipt:
  5. Detail the problem with your product:
- 

**TO MAKE A WARRANTY CLAIM YOU MUST  
RETAIN YOUR PROOF OF PURCHASE.**

---

## **WARRANTY AGAINST DEFECTS**

### **A. AUSTRALIAN CONSUMER LAW**

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

### **B. CONAIRMAN EXTENDED WARRANTY**

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 24 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the ConairMan product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

### **C. CONDITIONS**

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b)

any indirect, consequential or economic loss or damage however caused.

3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.
10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

## **SPARE PARTS**

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.









©2023 Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW 2086  
Australia

Conair New Zealand Limited  
PO BOX 251159  
Pakuranga, Auckland 2140  
New Zealand

## CONTACT US

For advice & tips on your new ConairMan product email us on:  
[aus\\_info@conair.com](mailto:aus_info@conair.com)

## CUSTOMER SERVICE

Australia: 1800 650 263  
New Zealand: 0800 266 247

Check out [CONAIRMAN.COM.AU](http://CONAIRMAN.COM.AU) for grooming tips & know how to let you craft a reputation.

**CONAIRMAN™**

**CRAFT A  
REPUTATION,  
MY MAN**