

CONAIRMAN™



XPERT BEARD™

TOOL TIPS

for the state-of-the-art beard & stubble trimmer.

CM787A

HERE YOU ARE.

RIGHT WHERE YOU NEED TO BE, MAN.

FROM THE STREETS OF
BROOKLYN, NEW YORK

**WE ARE CHANGE
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO
YOUR HANDS TO HELP YOU CRAFT

**A REPUTATION, NOT JUST ENGAGE
IN SOME BRILLIANT GROOMING.**

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS
& KNOW HOW TO LET YOU CRAFT A REPUTATION

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. This product is suitable for cleaning under an open water tap.



WARNING: Do not use or leave the AC power adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Detach the hand-held part from the supply cord before cleaning in water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The appliance contains rechargeable batteries that are non-replaceable.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

XPERT BEARD

BUCKLE UP, IT'S TRIMMING TIME.

The XPERT BEARD is the precision beard & stubble trimmer for perfect facial grooming.



- | | | | |
|--|--|---|---|
| 1. Cord/cordless use | 7. BEARD COMB GUIDE - 5.4mm - 10.0mm trimming lengths | trimming length | 14. 100% waterproof |
| 2. Lithium-ion power | 8. 0.4mm to 10mm trimming settings with ultra-precise 0.2mm motorised adjustments at the touch of a button | 11. On/Off switch | 15. Ergonomic design with curved body for easy control & compete comfort in use |
| 3. High performance DC direct drive motor | 9. + up button - increases the trimming length | 12. Smart memory function automatically stores & returns to the last selected setting for consistent trimming | 16. Cleaning brush |
| 4. Precision W-Tech blades | 10. - down button - decreases the | 13. LED display shows cutting length setting | 17. Oil |
| 5. Ultra-flexing contouring head | | | 18. Power adaptor |
| 6. STUBBLE COMB GUIDE - 0.4mm - 5.0mm trimming lengths | | | |

PREPPING YOUR NEW TOOL

CHARGING

The XPERT BEARD is so easy to use. But before you start using your new tool, you must take the time to charge it for **3 hours** before its first use.

Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 3 hours. After the first charge a full charge will only take 90 minutes.
- Maximum battery capacity will only be reached after 3 charging & discharging cycles.
- To charge the trimmer, first ensure your new tool is switched off, then insert the small plug on the charging adaptor into the hole on the base of the trimmer.
- Plug the charging adaptor into a suitable mains power socket and switch on.
- Always check that the charging indicator on the LED comes on when you have switched the charging adaptor on.
- When the trimmer is charging the LED display lights up for a few seconds and battery symbol indication will start to flash until the trimmer reaches maximum capacity of 90 minutes.
- A full charge will take 90 minutes and will supply up to 90 minutes cordless runtime.
- A quick charge of 5 minutes will supply 3 minutes cordless runtime, sufficient for a single instant beard or stubble trim.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to fully discharge & then recharge your tool for 3 hours every 3 months.

NB - When the trimmer has less than 3 minutes charge left, the battery symbol indication will start to flash. This indicates that the trimmer needs to be recharged, however it may continue to run for a very short while after.

CORDED USE

To use the trimmer connected to mains power:

- Insert the small plug on the charging adaptor into the socket on the bottom of your new tool.
- Plug the charging adaptor into a suitable mains power socket and switch on.
- Switch the trimmer on – NOTE – if the battery is weak and low on battery charge, wait approx. 1min before switching the trimmer on.

HOW TO USE THE XPERT BEARD

BEFORE USING

- Always inspect the trimmer blades for noticeable signs of damage.
- Always inspect the trimmer blades before use to ensure they are free from hair, debris etc.
- Ensure the trimmer is sufficiently charged before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.
- If possible, when using for the first time, try and grow your facial hair for a few days before cutting so you can trim down to a level that is best for you.

SELECTING A CUTTING LENGTH

The XPERT BEARD comes with 2x comb guides with 48 precision trimming lengths for crafting all types of beard & stubble.


The comb guides allow you to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you very short stubble, whilst 4mm will give you a longer stubble look. 6mm+ will give you a short beard and 10mm will give you a longer bearded look.

- **STUBBLE COMB GUIDE** - 0.4mm - 5.0mm – this is the pre-attached comb guide
- **BEARD COMB GUIDE** - 5.4mm - 10.0mm – this is the second comb guide that attaches over the top of the stubble comb guide
- Depending on the length setting you desire, attach either the stubble or beard comb guide and ensure that the comb guide/s are correctly positioned by pushing the comb guide/s gently downwards to secure into place.
- Use the “+” or “-” buttons to adjust the comb guides to the required trimming length.
- The trimming lengths are displayed on the LED screen in “mm” – scroll through the available length settings with the digital touch controls. The length settings on the LED screen will change as you adjust the “+” or “-” buttons
- There are 48 length settings available: 0.4mm - 5.0mm OR 5.4mm - 10.0mm in 0.2mm increments.

GOOD TO NOTE: ALWAYS PUT THE COMB GUIDE ON BEFORE TURNING THE TRIMMER ON, AND TURN THE TRIMMER OFF BEFORE REMOVING IT.

TRAVEL LOCK FEATURE

The XPERT BEARD comes with a travel lock feature which will lock the on/off button from turning on accidentally.

To activate the travel lock, press and hold the on/off button for 5 seconds until the lock symbol  is shown.

To de-activate the travel lock, press and hold the on/off button for 2 seconds until the motor switches on and starts running.

When the charging plug is placed into the trimmer, the lock function will deactivate.

USING THE SMART MEMORY FUNCTION

The XPERT BEARD has a smart memory function that automatically stores and returns to the last selected setting for consistent trimming.

When the unit is switched off the comb guide returns to 0.4mm position. When the trimmer is switched back on the comb guide automatically moves up to the last chosen length setting.

TRIMMING TIPS

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

USING THE TRIMMING BLADES + COMB GUIDE

1. Switch the trimmer on by pressing the On/Off button.
2. Based on your desired trimming length, select your desired comb guide:
 - STUBBLE COMB GUIDE - 0.4mm - 5.0mm – this is the pre-attached comb guide
 - BEARD COMB GUIDE - 5.4mm - 10.0mm – this is the second comb guide that attaches over the top of the stubble comb guide
3. To adjust the cutting length of your trimmer, simply use the "+" or "-" buttons to adjust the comb guides to the required trimming length.
4. When trimming, the teeth of the comb guide should be pointing upwards and should be flat against the face.
5. Move the trimmer upwards through the hair, a little at a time. It is suggested to trim the hair in the direction of hair growth, as trimming against the direction of growth could cause a rash or irritation.
The ultra-flex contouring head will follow the curves of your face to ensure both accuracy and comfort.
6. Pull the skin firmly with one hand during the trimming process to ensure the closest trim possible.
7. Move the trimmer slowly and carefully, so as not to cut any hair you do not intend to trim.
8. Just like shaving, extra time should be given when trimming under the neck area, as again this is where hairs grow in many different directions.
9. Trim, shape and define your facial hair as needed.

BE CAREFUL NOT TO APPLY EXCESS PRESSURE TO THE BLADE, AS THIS MAY DAMAGE THE BLADE AND CAN RESULT IN INJURY TO THE SKIN DURING TRIMMING.

USING THE TRIMMER WITHOUT THE COMB GUIDE

The XPERT BEARD can be used without the comb guide attached. This is ideal for detailing/shaping and general tidying of edges. If you are looking for an ultra-close finish, you can use the trimmer without the comb guide. This will give you an extremely short cut.

1. To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger push up on each side of the comb guide (Fig. 1).
2. Flip the comb guide to the back of the unit, gently pull down and secure under the latch to lock into place (Fig. 2).
3. To release the comb guide, pull down and move away from the latch (Fig. 3).

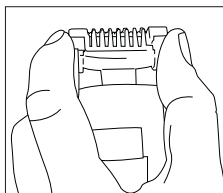 


Fig. 1

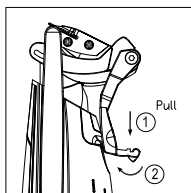 


Fig. 2

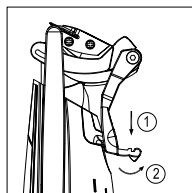 


Fig. 3

IMPORTANT: PLEASE NOTE WHEN USING THE TRIMMER WITHOUT THE COMB GUIDE, THE CUTTING LENGTH WILL BE BELOW 0.4MM. THE LENGTH SETTING SHOWN ON THE LED SCREEN WILL NO LONGER BE RELEVANT WHEN THE COMB GUIDE IS DETACHED.

TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades + the comb guide after every use.

The blades are washable for easy cleaning. Likewise, the trimmer is 100% waterproof, so you can place the trimmer comb guides and blades under running water.

To remove the trimming blade:

1. Make sure that the trimmer is switched off
2. Detach the comb guide by gently lifting the front of the comb guide from both sides and flipping it over to the back of the trimmer and locking it into position by clicking it securely onto the fastener on the back of the handle.
3. To remove the trimming blade hold the handle of the trimmer with one hand, place your thumb underneath the blades and push the blades away from the handle.

To clean the blades:

1. First, take the cleaning brush and brush away any loose hairs that have collected in the blades.
2. Rinse the trimming blades under running water. The comb guide can also be rinsed separately.
3. After cleaning, make sure to shake off excess water and dry the head of the trimming blades + comb guide before replacing onto the handle.
4. After rinsing the blades, they will need to be re-oiled.
5. Using the oil supplied with your new tool, unscrew the cap & cut off the very end of the plastic tube with a pair of scissors to release the oil.
6. Switch your tool on, gently squeeze the oil tube & apply 2 drops of oil onto the blades. Leave the tool on for a further few seconds to allow the oil to thoroughly spread across each of the blades. Switch off the tool & remove any excess oil by gently dabbing with a cloth.

GOOD TO NOTE: BEFORE RE-ATTACHING THE BLADES TO THE TRIMMER, ENSURE THEY ARE DRY AND THE MOVING BLADE IS IN THE CENTRE (FIG. 4)

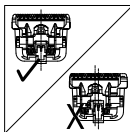 


Fig. 4

REPLACING THE COMB GUIDE

If for any reason the stubble comb guide breaks or becomes cracked, you can purchase spare comb guides from Conair Customer Service on 1800 650 263 (in Australia) or 0800 266 247 (in New Zealand).

To change the comb guide, follow these instructions:

1. Using two screws in each side of the comb guide pin, screw in opposite force, until one side of the screw comes loose (Fig.5).
2. Pull out the comb guide pins (Fig.6 + Fig.7).
3. Replace with a new stubble comb guide (Fig.8).
4. Replace the stubble comb guide pin and screw tightly (Fig.9).

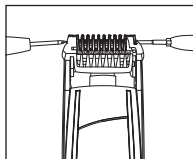 


Fig. 5

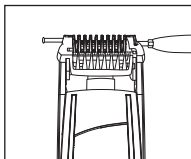 


Fig. 6

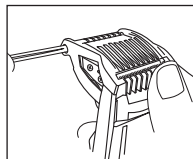 


Fig. 7

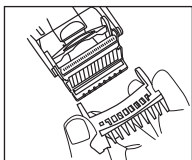 


Fig. 8

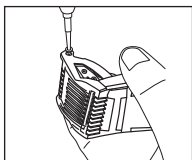 






Fig. 9

WORLDWIDE VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 230-240V	Australia, New Zealand	230-240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

BATTERY DISPOSAL

The XPERT BEARD trimmer contains a Li-ion battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.



Li-ion

Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

WARRANTIES

1. In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 2 YEAR (24 MONTH) WARRANTY

2. **AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.
3. Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
4. This Standard 2 Year (24 Month) Warranty ("Standard Warranty") applies for a period of 2 years (24 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
5. If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or

contact us directly if you are unable to take the product back to the place of purchase. The procedure for claiming under this Standard Warranty is as detailed below.

6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. **In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:**
 1. **Date of purchase**
 2. **Retailer name & location**
 3. **Product model number & name**
 4. **Confirm you have your purchase receipt**
 5. **Detail the problem with your product.**
8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is

removed or defaced, or b) the product has been serviced or otherwise repaired by a person not authorised to do so by Conair or where non-approved replacement parts are used.

15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.
18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during the Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.
23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

CONAIR EXTENDED WARRANTY

25. In addition to the rights and remedies you have pursuant to law, we provide an extended warranty for your product ("Extended Warranty"), which commences from the date of purchase and continues for a period of 36 months for the **trimmer motor and rechargeable battery only** ("Extended Warranty Period") after which it expires, subject the conditions outlined in the Standard Warranty above. For the sake of clarity, all other items including blades, comb guides and consumables are covered by the Standard Warranty outlined above but are not subject to this Extended Warranty.
26. If you make an Extended Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt, to our address located in our Contact Information section.
27. This Extended Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person not authorised to do so by Conair or where non-approved replacement parts are used.
28. This Extended Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller.
29. Under this Extended Warranty, we do not have to refund or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.

SPARE PARTS

30. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills NSW 2084

Customer Service

Australia

1800 650 263

email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159 Pakuranga, Auckland New Zealand 2140

Customer Service

New Zealand

0800 266 247

email: aus_info@conair.com



©2023 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new ConairMan product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Check out CONAIRMAN.COM.AU for grooming tips & know how to let you craft a reputation.

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**