

CONAIRMAN



THE PRECISION SHAVE

TOOL TIPS

for the USB rechargeable rotary shaver with
3D floating heads for the closest shave.

VSM350A

HERE YOU ARE.

RIGHT WHERE YOU NEED TO BE, MAN.

FROM THE STREETS OF
BROOKLYN, NEW YORK

**WE ARE CHANGE
MAKERS & STYLE CREATORS.**

WE'VE FOUGHT OUR WAY INTO
YOUR HANDS TO HELP YOU CRAFT
**A REPUTATION, NOT JUST ENGAGE
IN SOME BRILLIANT GROOMING.**

KNOW YOUR WORTH, INVEST IN IT MAN & CHECK OUT OUR INSIDER
KNOWLEDGE, TIPS & TRICKS TO MAKE THE MOST OF THE STYLE PATH
YOUR FEET ARE FIRMLY PLANTED ON. GIDDY UP, IT'S GROOMING TIME.

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS
& KNOW HOW TO LET YOU CRAFT A REPUTATION

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Do not use or leave the AC power adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. This appliance is suitable for use in a bath or shower. The parts that have to be fixed must be installed so they cannot fall into water. Detach the shaver handle from the supply cord before cleaning.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug the appliance immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING: For purposes of recharging battery, only use detachable supply unit CA92 provided with this appliance.

This appliance contains rechargeable batteries that are non- replaceable.

IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces.
- Never twist or pull on the power cord.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

THE PRECISION SHAVE

BUCKLE UP, IT'S SHAVING TIME.

The Precision Shave is the rechargeable rotary shaver with 3D floating heads for the closest shave.



- | | | |
|---|---|-------------------------------|
| 1. Cordless use | 5. LED display | 9. Storage /Charging stand |
| 2. 3 flexing rotary shaver heads & blades | 6. Pop-up trimmer (located at the back) | 10. USB charging cable |
| 3. Shaving head release button | 7. Protective cover | 11. USB wall charging adaptor |
| 4. On/Off switch with Travel Lock feature | 8. Cleaning brush | |

PREPPING YOUR NEW TOOL

CHARGING

The Precision Shave is so easy to use. But before you start using your new tool, you must take the time to charge it for **3 HOURS BEFORE ITS FIRST USE**. Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 3 hours.
- Ensure your new tool is switched off.
- Use the provided USB cord & wall adaptor & the charging stand to connect the appliance to main supply, or connect the Precision Shave directly to the mains supply using the USB cord & wall adaptor.
- The adaptor supplied can be used for worldwide voltage 100-240V . A plug adaptor suitable for the country will be required.
- The USB cable can alternatively be plugged directly into a direct USB port for charging.
- Once charging is started, the charging icon will display in the LED display. The LED display will flash the remaining operating time, this will increase in minutes as the tool charges.
- The charging icon will disappear when the appliance is fully charged. At the same time, the LED will show 99 & fully charged icon will appear. Remove from the charging stand or USB adaptor once full charge is reached.
- It takes 3 hours for tool to be fully charged.
- A full charge will supply 99 minutes cordless runtime.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to allow your shaver to fully discharge & then recharge for 3 hours every 3 months.

HOW TO USE

CHARGING YOUR SHAVER

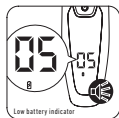


Fig.1



Fig. 2 Part 1



Fig. 2 Part 2

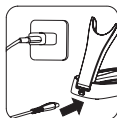


Fig. 2 Part 3

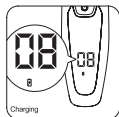


Fig.3



1-3 Hrs Fig.4

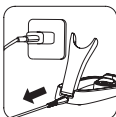


Fig.5

1. When the shaver is turned on, the LED display will light up & show the remaining operating time.
2. If you hear a beep sound & find the charging icon starts to flash when using or after use, the battery is low & needs recharging (Fig.1).
3. Use the USB cable and power adaptor provided. Fold the charging stand into position (Fig 2 Part 1). Plug the cable into the rear of the stand. Alternatively, you can plug the USB cable directly into a USB port.
4. Once charging is started, the charging icon will appear, the LED display will flash the remaining operating time & the remaining operating time will increase as the tool charges (Fig. 3).
5. The charging icon will disappear when the tool is fully charged, at the same time, the LED will show 99 & fully charged icon will appear (Fig. 4). Remove the tool from charging once the 99min battery charge is reached (Fig. 5).
6. It takes up to 3 hours for the shaver to be fully charged.

NOTE: Do not charge the appliance for longer than the recommended time.

HOW TO USE THE PRECISION SHAVE

BEFORE USING

- Always inspect the rotary heads & blades for noticeable signs of damage.
- Always inspect the rotary heads & blades before use to ensure they are free from hair, debris etc.
- If the foil is cracked, broken or loose, do not use it again & replace with a new foil. Using a foil in a faulty condition can cause injury.
- Ensure the shaver is sufficiently charged before use.
- Men whose skin is sensitive or easily irritated by shaving, or who suffer from a skin allergy, should test one section on the leg or arm before using the shaver.
- Do not shave on open wounds, cuts, burns, warts, moles or on sunburned skin.
- Do not use the foil shaver if you suffer from skin irritations or infections, such as psoriasis or eczema. If at all unsure always consult your doctor before use.

TRIMMING & SHAVING TIPS

CHECK OUT CONAIRMAN.COM.AU FOR GROOMING TIPS & KNOW HOW TO LET YOU CRAFT A REPUTATION

USING THE PRECISION SHAVE

PREPARING THE SKIN

Before using the Precision Shave, make sure that the skin is clean & free from oil & dirt.

Exfoliating the skin with a face scrub once a week helps to:

- Prevent hairs from growing under the skin, resulting in in-grown hairs
- Remove dead skin cells & refine the texture of your skin, resulting in a closer shave
- Prepare your skin to help it absorb skin care products.

We recommend exfoliating ideally the day before, as well as just before shaving. This will help straighten the hair & make it easier to shave. Avoid exfoliating just after shaving.

Having a warm shower before use will also help to soften the hair.

1. Remove the protective cover.
2. Switch the shaver on by pressing down on the on/off button (hold for 3 seconds if the travel lock has been engaged).
3. It is strongly recommended to start shaving from the neck area, which is more sensitive
4. Hold the shaver heads parallel to the skin & use short overlapping circular motions both clock wise & anti-clockwise.

- Do not push the shaver on the skin too hard as it could cause irritation, make the shaver warm & prevent a perfect shave, exert light pressure & let the shaver heads do all the work.
- As a precaution, the operation of the shaver may slow down substantially if the foils & blades are pressed too hard against the skin.
- Please note that it can take up to 2 to 4 weeks for your skin to adapt to a new shaver. We recommend using a facial moisturiser after shaving & not an aftershave solution that contains alcohol.

LED DISPLAY

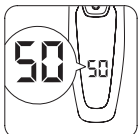


Fig.1 Battery time remaining

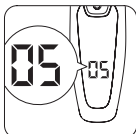


Fig.2 Shaving session time



Fig.3 Remove hair reminder

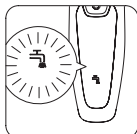


Fig.4 Cleaning reminder

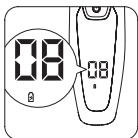


Fig.5 Battery level-low charge & charging indicator

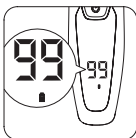


Fig.6 Fully charged indicator

NOTE: the LED display automatically turns off after 8 seconds to conserve battery power.

The LED display features the following:

BATTERY REMAINING RUN TIME

99

When turned on, the LED display shows the battery remaining time (Fig.1). When charging the run time will flash & count up to the maximum 99 min run time.

NOTE: battery run time is an estimate & impacted by battery charge level & operating temperatures.



SHAVING TIME

After use, when pressing the OFF button, the LED display will show the time spent shaving in this session (Fig. 2). This also determines the cleaning reminder.



BATTERY LEVEL-LOW CHARGE / CHARGING INDICATOR

If you hear a beep sound & find the battery level icon starts to flash when using or after use, the battery is low & needs recharging. Illuminates to show the shaver is in charging mode. (Fig.5)



FULLY CHARGED INDICATOR

Illuminates to show the shaver is in fully charged mode. (Fig.6)



CLEANING REMINDER



Illuminates after each shave of 2 minutes or longer as a reminder to clean the shaver chamber after each use with the supplied brush (Fig. 4). A beep will sound & this icon will appear if the shaver has not been cleaned for an extended period of time (Fig.3).

NOTE: The Precision Shave will stop working if the unit is filled with hair or debris to protect from damage. Ensure you clean the shaver regularly to maintain full functionality



TRAVEL LOCK

1. To prevent the tool from switching on unintentionally, you can press & hold down the ON/OFF button for 3 seconds (Fig.1) until the lock icon appears & a beep sounds (Fig.2).
2. To unlock your shaver again, press & hold the ON/OFF button (Fig. 3) the lock icon will flash & the display will countdown from 3 to 0. Once the remaining time is shown, release the ON/OFF button. The shaver is now unlocked & will work as normal when switched on.

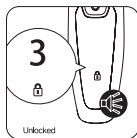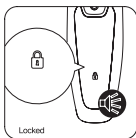

USING THE POP-UP TRIMMER

On the back of the shaver there is an integrated pop-up trimmer that's perfect for trimming sideburns or areas of the beard that you do not wish to shave completely.

To use the pop-up trimmer:

1. When the shaver is ready to operate, pull the trimmer release button downward to expose the trimmer.
2. Switch the shaver on by pressing the on/off button (hold for 3 seconds if the travel lock has been engaged).
3. Hold the blades of the sideburn trimmer at a right angle to the area of the skin concerned. To shorten sideburns, first comb them in the direction of growth of the hair. Here again you should hold the blades at a right angle to the head, so that they touch the skin lightly & cut the sideburns by moving the shaver down & away from the desired edge of your sideburns.
4. After trimming switch the shaver off before pressing the trimmer back to its original position.



SHAVER CLEANING & MAINTENANCE

Because the shaver rotary heads & blades are precision made & very sharp, always handle with care.

To ensure the long-lasting performance of your shaver & to keep it clean & odour free, check & clean after every use, following the below instructions:

After each use

1. Turn the shaver OFF. Press the shaving head release button (Fig. 2), the head will spring open.
2. Using the supplied brush clean any excess hair from the hair chamber & around the blades into a bin

A cleaning reminder (Fig. 3) will indicate in the LED display during regular use. This indicates to rinse clean the shaver heads under the flow of tap water to remove any excess hair (Fig. 3), from the hair chamber & foils, then air dry before use.

To remove the foils & blades for deep cleaning or replacement.

We recommend replacing the blade head assembly after approximately 2 years of regular daily use. Replacement blade assemblies are available from Conair Customer Service at aus_info@conair.com.

1. Press the shaving head release button (Fig. 2), the head will spring open.
2. Remove the shaving head by pulling it upwards firmly (Fig. 4).
3. With the shaver head on a flat surface, foils facing down. Turn the locking wheel in the centre counterclockwise (direction of the arrow): pulling it up to unlock & remove the retaining frame that holds the blades & foils in place (Fig. 4).
4. Remove & clean only one set of blades/foil at a time, then replace (Fig. 5).
5. Separate the blade & foil, clean both parts underwater or by brush (Fig. 6).
6. Once foils & blades are reinstalled into the shaving head, secure in place with the locking wheel (turn clockwise). Insert the shaver head firmly into the shaver body

until it clicks into place.

7. It is recommended to lubricate blades and the pop-up trimmer with a few drops of lubricating oil or spray designed for clippers and blades.

8. Close head & switch on shaver for a few seconds distribute oil. (Fig. 7).

ATTENTION: Do not clean more than one blade at a time, since they are all matching sets. If you accidentally interchange them, it could influence the shaving results.



Fig.1



Fig.2

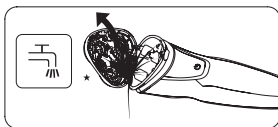 


Fig.3



Fig.4



Fig.5

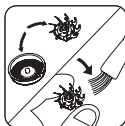 


Fig.6








Fig.7

WORLDWIDE VOLTAGE

This shaver is supplied with a USB cable and power adaptor making it suitable for worldwide use for power supplies from 100-240V.

Note when using the power adaptor a suitable plug adaptor will be required, please refer to the chart below.

| Plug adaptor required | Voltage and plug adaptors | Country | Voltage setting |
|---|--|---|-----------------|
|  | British plug: 240V | Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only) | 240V |
|  | European plug: 240V | Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only) | 240V |
|  | Australian and New Zealand plug: 230-240V | Australia, New Zealand | 230-240V |
|   | American plugs: 120V | North America, Japan, Canada (parts of) | 120V |

BATTERY DISPOSAL

This Precision Shave contains a Nickel Metal-Hydride battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.



Ni-MH

Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

WARRANTIES

1. In this warranty document ("Warranty Document"), "Conair", "we" or "us" means:
 - Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086, in relation to products purchased in Australia; or Conair New Zealand Ltd of Conair New Zealand Limited, PO BOX 251159 Pakuranga, Auckland 2140, New Zealand in relation to products purchased in New Zealand.
 - Nothing in this Warranty Document limits or reduces (or purports to limit or reduce) any statutory guarantees pursuant to the Australian Consumer Law for Australian customers or the Consumer Guarantees Act 1993 for New Zealand customers.
 - If you have any questions about the product you have purchased in either Australia or New Zealand, please contact us on 1800 650 263 (for Australian customers) or 0800 266 247 (for New Zealand customers). Further contact details are set out at the bottom of this Warranty Document.

STANDARD 2 YEAR (24 MONTH) WARRANTY

2. **AUSTRALIA:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
NEW ZEALAND: Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.
3. Conair's name, postage address, email and phone number are available at the bottom of this Warranty Document, under "Contact Information".
4. This Standard 2 Year (24 Month) Warranty ("Standard Warranty") applies for a period of 2 years (24 months) from the date that you purchased your product ("Standard Warranty Period"). For clarity, the relevant defect must appear within the Standard Warranty Period timeframe for this Standard Warranty to apply.
5. If your product is defective, and the product is covered under this Standard Warranty, you should, in the first instance, take the product back to the place you purchased it from or contact us directly if you are unable to take the product back to the place of purchase. The

procedure for claiming under this Standard Warranty is as detailed below.

6. To make a Standard Warranty claim, you will need to return the defective product back to the place it was purchased where it will be assessed under this Standard Warranty. Or if you are unable to return the defective product back to the place of purchase, you will need to call our Customer Service team on 1800 650 263 (for Australian Customers) or 0800 266 247 (for New Zealand customers) or send an email to the email address provided below under 'Contact Information'.
7. **In order to make a claim under this Standard Warranty, you will need to provide the following details to Conair:**
 1. **Date of purchase**
 2. **Retailer name & location**
 3. **Product model number & name**
 4. **Confirm you have your purchase receipt**
 5. **Detail the problem with your product.**
8. If you make a Standard Warranty claim directly with us, we will ask for you to send us back the defective product along with the purchase receipt. To do this, please head to your local post office and send to the product to our reply paid address which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084. For clarity, we will be responsible for covering the cost of postage to the above reply paid address.
9. Once we receive your product, we assess it accordingly. Upon analysing the defect, we will either: a) have the product replaced and sent back to you; or b) refund you (either in part or in full).
10. The benefits provided to you under this Standard Warranty are in addition to other rights and remedies available to you under consumer law.
11. Within the Standard Warranty Period, if your product suffers a defect in the materials or workmanship, Conair will either refund or replace your product, in our sole discretion, for no charge.
12. Under this Standard Warranty, we do not have to refund, repair or replace your product if the product's defect or damage is a result of misuse, abuse, accident, act of God such as lightning, or nonobservance of Conair's instruction booklet on the part of the user.
13. The Standard Warranty does not cover ordinary wear and tear of the product.
14. This Standard Warranty is immediately void if: a) any serial number or product plate is removed or defaced, or b) the product has been serviced or otherwise repaired by a person not authorised to do so by Conair or where non-approved replacement parts are used.

15. You are aware that the product is designed for domestic use only and that it must be connected to the electrical voltage supply as specified in the ratings label located on the product itself and detailed in the product's instruction booklet. The Standard Warranty does not cover defects arising from non-domestic use or use of incorrect voltage supply.
16. This Standard Warranty may only be claimed where proof of original purchase is presented, for example, original receipt or invoice.
17. The Standard Warranty on any replacement product or parts will expire on the same date that the Standard Warranty Period on the original product expires, as far as the law permits.
18. In order to obtain a remedy under this Standard Warranty, the defect must have occurred during this Standard Warranty Period and you (as the purchaser) bear the onus of proving that fact, and that the defect was not caused by any of the exclusions above.
19. This Standard Warranty does not cover any product purchased from any entity who is not an authorised Conair distributor or reseller. For clarity, all warranties are only enforceable in Australia and New Zealand.
20. To the fullest extent permitted by law, Conair does not accept liability for: a) any loss or damage however suffered, caused by or arising out of any failure to use a product in accordance with Conair's instruction booklet; and b) any indirect, consequential or economic loss or damage however caused.
21. We will be responsible for all postage and freight charges and any other expenses incidental to claiming under the Standard Warranty, however you must send the product back to our Reply Paid address (which is: Reply Paid 146, PO Box 146, Terrey Hills NSW 2084).
22. If your product is defective, and the product is covered by this Standard Warranty, you should take the product back to the place you purchased it from or contact us directly using the contact information provided in the Contact Information section below.
23. To honour the Standard Warranty, you must retain your proof of original purchase, for example, original receipt or invoice and you must present the proof of original to obtain replacement, refund or service under this Standard Warranty, alongside your defective product.
24. You understand that the Standard Warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. When asked to do so, please provide your proof of original purchase along with the requested information/defective item.

SPARE PARTS

25. Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CONTACT INFORMATION

Conair Australia Pty Ltd

PO Box 146 Terrey Hills NSW 2084

Customer Service

Australia

1800 650 263

email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159 Pakuranga, Auckland New Zealand 2140

Customer Service

New Zealand

0800 266 247

email: aus_info@conair.com



©2023 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 2140
New Zealand

CONTACT US

For advice & tips on your new ConairMan product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Check out CONAIRMAN.COM.AU for grooming tips & know how to let you craft a reputation.

CONAIRMAN™

**CRAFT A
REPUTATION,
MY MAN**

IB-22/398A